 
 



FOR NOTES




TONE



 
AMBIENCE




REVERB.

 


TONE

 


AMBIENCE

 


REVERB.

 

TONE

 

AMBIENCE

 

REVERB.

YERASOV MUSIC CORPORATION
www.yerasov.ru e-mail: sale@yerasov.ru

FOR NOTES

REVERBERATOR RV-10

Guitar pedal



User manual

YERASOV®

PACKAGE CONTENTS

Guitar pedal RV-10, pcs.....1
User Manual, pcs.....1

SAFETY MEASURES

- Keep away from high humidity.
- After exposure to cold, keep the device at room temperature for at least 30 minutes before switching on.
- Avoid dropping, keep away from dirt and water.

 
OVERVIEW

The **RV-10** reverb pedal has a wide range of sounds from soft echo to huge and spacy reverb with almost infinite decay. With this flexibility you can also get fashionable freeze effect out of it.


APPLICATION

The pedal is powered by either a 6F-22 battery or a 9V DC adapter. We recommend using YERASOV AD9-100 or AD9-400 adapters. For extended battery life unplug the guitar cable when device is not being used.

- Install battery or plug the adapter in.
- Connect the pedal as shown in the illustration.
- The LED light indicates that the pedal is turned on.
- Turn **TONE**, **AMBIENCE** and **REVERB** knobs all the way counterclockwise.
- Set the desired dry to processed signal ratio using the **REVERB** knob.
- **AMBIENCE** knob controls the length of the reverb tail. When set to maximum, shimmer/freeze effect may be achieved.
- Turn **TONE** knob to set the brightness of the effect. This may dramatically change the transparency of the mix and make your guitar stand out or dissolve.

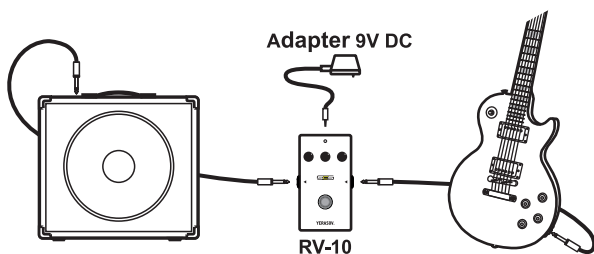


PANEL DESCRIPTION

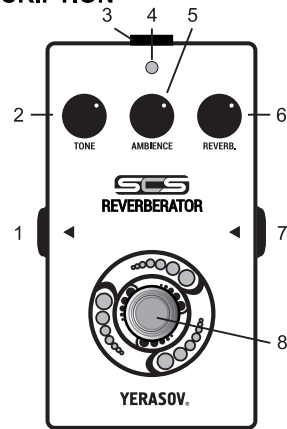 

- 1 - Output Jack
- 2 - **TONE** - tone control
- 3 - DC adapter input
- 4 - On / Off LED indicator
- 5 - **AMBIENCE** - echo length control
- 6 - **REVERB.** - reverb. level control
- 7 - Input Jack
- 8 - On / Off switch

 CONNECTION POLARITY OF DC ADAPTER



SCS PEDAL BOARD

YERASOV **RV-10** is compatible with SCS Pedal Board. The SCS connector is at the bottom of the pedal, the cable is included in the SCS Pedal Board package. For more information please visit www.yerasov.ru

BATTERY REPLACEMENT

Access the battery compartment by unscrewing the bottom cover. Always put the cover back after replacing the battery.

SPECIFICATIONS

Power supply (battery / DC), V.....	9
Current Draw, mA.....	40
Dimensions, mm.....	112 x 62 x 50
Weight, kg.....	0,25