


YERASOV MUSIC CORPORATION  
 www.yerasov.ru e-mail: sale@yerasov.ru

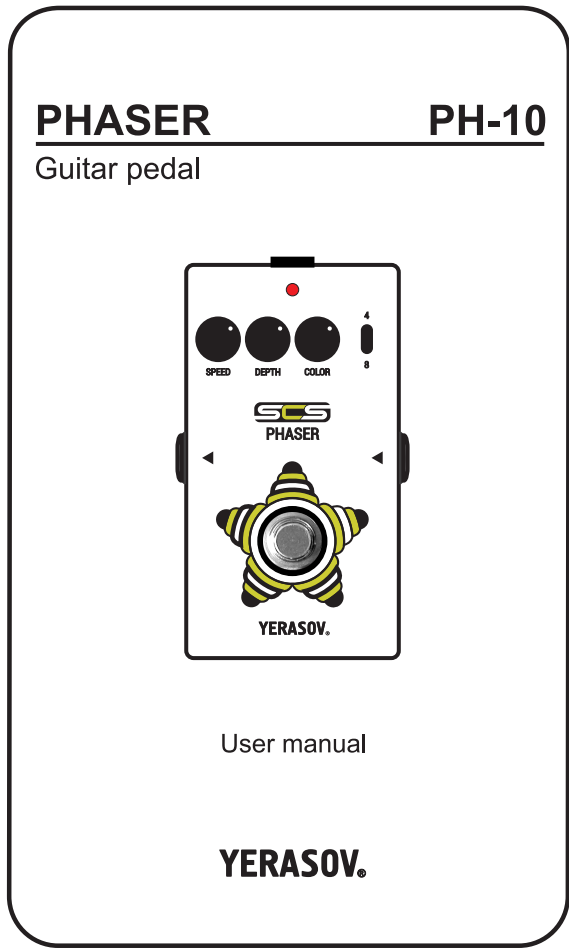

**PHASER**

**PH-10**

Guitar pedal



User manual

**YERASOV.**

Guitar pedal PH-10, pcs.....1  
 User Manual, pcs.....1  
 Packagings packing, pcs.....1

**PACKAGE CONTENTS**

Input impedance, MOhm .....1  
 Power supply (battery or power adapter), V.....9  
 Current Draw, mA.....12  
 Dimensions, mm:.....112x62x50  
 Weight, kg.....0,25

**SPECIFICATIONS**

## PRECAUTIONS

- Avoid storing or operating the unit in humid conditions (not above 80%).
- After storage or transportation at a low temperature before turning on unit shall be stored at room temperature for at least 2 hours.
- Protect the device from falls, bumps, to get into foreign objects, liquids, dirt and rain.

## GENERAL INFORMATION

PHASER pedal **PH-10** allows you to get the effect of “rotating sound” and gives the sounding instrument volume and specific colouring. Regulators of **SPEED** and **DEPTH**, you can choose the desired frequency and modulation depth. The regulator **COLOR** adds color sound, emphasizing the resonant frequency in the output signal.

Switch **4/8** allows you to toggle the number of phase shifting chains that affect the sounding of the instrument.

Pedal assembled of high quality electronic components which provide reliability.

 
The pedal is applied high-quality foot switch ALPHA real TRUE BYPASS

## PANEL DESCRIPTION



- 1 - output Jack
- 2 - **SPEED** - frequency modulation knob
- 3 - **DEPTH** - modulation depth knob
- 4 - Jack for DC adapter
- 5 - on LED effect
- 6 - **COLOR** - effect bright knob
- 7 - phase chains switch
- 8 - input Jack
- 9 - on/off button effect

## CONNECTION POLARITY OF DC ADAPTER



## USE OF PRODUCT

The power of guitar pedals **PH-10** from an external source of stabilized voltage 9V or battery type 6F-22, which is installed under the bottom cover of the pedal. In order to avoid the background, use only adapters AD9-100 or AD9-400 firms YERASOV.

Turn on the power from the battery when joining plug type Jack (mono) input Jack, so for extended battery life, do not leave the Jack in the input connector, if you are not using the device.

- Connect the AC adapter to the Jack or install the battery.
- Connect the pedal according to the picture.
- Turn on the power.
- When you turn on the pedal led indicator illuminates.
- The rotation of the regulators to obtain the required You sound.

## USE THE PEDAL WITH SCS PEDAL BOARD

The pedal is compatible with SCS Pedal Board. Connector for SCS is located on the bottom cover of the pedal body. Connect the pedal to the Pedal Board is a special cable that comes with the SCS Pedal Board. For more detailed instructions, please visit to site [www.yerasov.ru](http://www.yerasov.ru).

## REPLACEMENT BATTERY

The battery compartment is located underneath the pedal cover. To replace the battery, remove the cover by unscrewing the 4 screws. Replace the battery and replace the cover

